


Switch Wiring



NOTE: Level switch may bounce up and down during road travel and cause the alarm to activate sporadically.

Wire the level switch to the PTO switch to assure that the level switch alarm is active only when the generator is running.

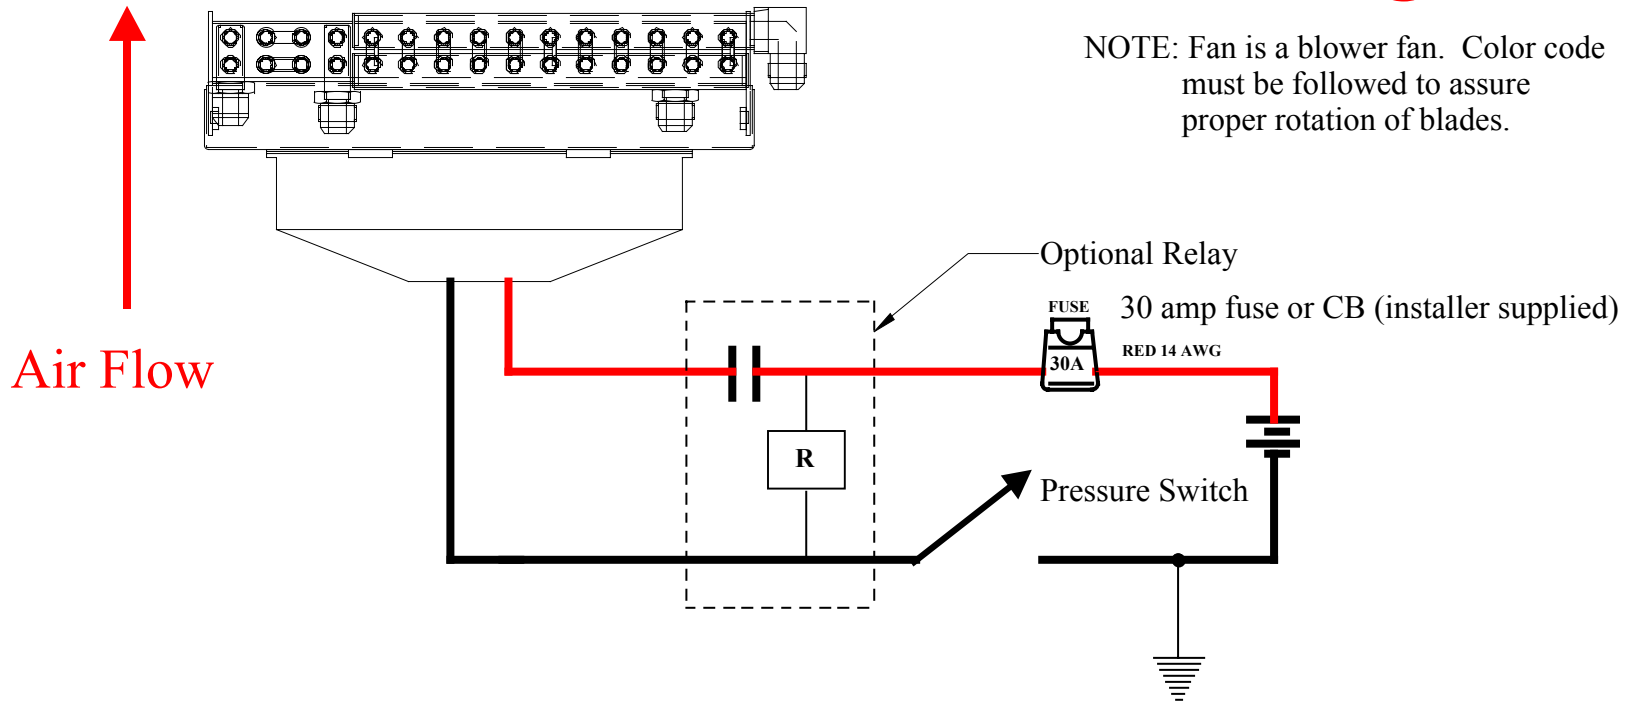